

Thank you for purchasing this AquaTech SYNC Transmitter Housing.

#### Overview:

The SYNC Transmitter Housing is a compact and easy to use Housing that supports a range of flash transmitters. Wirelessly connect your camera to one or multiple professional strobes, or even speedlights to create a range of lighting effects that capture your unique vision. The simple design of the SYNC connects to your water housing via our 6 Pin SYNC cable system and has the ability to support TTL modes and Hi-Speed SYNC (for Canon and Nikon only). 6 Pin SYNC cables are available in a range of sizes up to 30ft, so you can float your SYNC to the surface to continue to transmit the radio signal even if you're well below the surface.

An amazing feature of the SYNC Transmitter Housing is the option to have the SYNC wirelessly control the LUX Flash Housing when using a Godox transmitter. This opens up a world of new options for wireless off-camera flash in the water with full TTL and HSS (for Canon and Nikon only).

The SYNC is easily secured with 2 thumbscrews to provide an even seal across the clear backplate. As the SYNC is able to support multiple brands with it's control-free design, the exposure control for your lights can either be performed in camera or on the light itself.

The SYNC features a new quick-cam mounting system that connects to the supplied Pro Mount V4 without the need for any additional tools. Easily interchange your SYNC Transmitter Housing with an action camera on the Pro Mount V4 when lighting is not required.

#### What's in the Box

SYNC Transmitter Housing (please choose the compatible camera manufacturer option)

Pro Mount V4

13" 6 Pin Flash SYNC Lead

Camera Hotshoe Connector

AquaTech Flash Bulkhead Connector

#### Table of Contents

[What's in the Box](#)

[Nomenclature](#)

[Initial Setup](#)

[Using the SYNC Transmitter Housing Underwater](#)

[Safety information](#)

[Maintenance and Repair](#)

[Limit of Liability](#)

[Warranty](#)

[Servicing](#)

[Returns](#)

[Legals](#)

#### Initial Setup

Additional Tools Needed: Flathead screwdriver, Crescent wrench

Open SYNC Transmitter Housing

Then simply slide your transmitter into SYNC Hot Shoe

Turn transmitter on, and lineup SYNC backplate holes with SYNC housing

Insert Turn Knob from front of SYNC and thread it in, spinning Turn Knob clockwise.

Remove the Flash Bulkhead plug from your Sport Housing with a Flathead screwdriver turning counter clockwise, **install the supplied Flash Bulkhead onto your Sport Housing making sure the two o-rings are properly in place.**

**Note: the additional Flash Bulkhead will be found bagged with your grease, hex key, Flash Sync Cable and camera hot shoe.**

**\*\*Once the Flash Bulkhead is installed onto your Sport Housing, attach the female end of the Camera Hotshoe into male end of the Flash Bulkhead.**

Once the Flash Bulkhead is installed attach the female end of Camera Hotshoe into male end of recently installed Flash Bulkhead.

Slide Camera Hotshoe into camera body.

Unscrew cap from SYNC housing Bulkhead and housing Flash Bulkhead.

Remove caps from both ends of the SYNC cord.

Install one end of the SYNC cord into SYNC Housing Bulkhead. Ensure it is correctly lined up by aligning electrical pins.

Place the attached Sync cord Male threaded fastener over the Female threaded Bulkhead and screw in clockwise until secure.

Attach the other end of SYNC cord into housing Bulkhead following the previous steps.

To install SYNC Flash Housing you will need to have the Pro Mount installed. Please refer to the corresponding manual for Pro Mount installation.

Push Quick Cam Mount through the slot on the Pro Mount and securely screw into place.

Using the SYNC Transmitter Housing in and around water

For best results please make sure you have carefully followed all initial setup instructions prior to taking your SYNC Transmitter Housing underwater.

**\*\*After installing the provided additional Flash Bulkhead onto your Sport Housing, please make certain it is installed correctly by doing a “dunk” test (without your camera installed). If there is any moisture or water present after the “dunk” test is performed, please contact AquaTech via [contact@aquatech.net](mailto:contact@aquatech.net) so we can assist you with the reinstall of the Sport Housing Flash Bulkhead. Note: when not using your Sync Transmitter Housing, the supplied Flash Bulkhead cap must be replaced. This Bulkhead is a “dry connector” and must never be exposed to water. Either the sync cable or the cap must be on the Bulkhead at all times. This is very important to recap the Bulkhead on your Sport Housing if a Sync cable is not installed.**

#### Safety Information and Warning

Do not exceed depths of 10m/33ft.

Do not leave your Sport Housing gear in temperatures greater than 50 C (125 F).

#### Maintenance and Repair

With proper care your Sport Housing will last for many years. If in time you do notice any problems that come up or if there is any damage to the equipment please contact AquaTech directly at [service@aquatech.net](mailto:service@aquatech.net) for repairs or servicing.

Occasionally use a light amount of the grease provided for the metal shafts of your small push controls. This will help prevent the controls from sticking. However, you can help prevent this by washing your Sport Housing with fresh water after each use. If your Sport Housing is used on a regular basis (more than 100 times a year) an annual service by one of our qualified team members should be considered. Especially those working in the saltwater, one of the most corrosive environments.

#### Limit of Liability

In the event of a product warranty claim, AquaTech is only liable up to the value originally paid for the product.

Losses of associated equipment, income or any other financial costs are not covered under this warranty, under any circumstances.

#### Warranty - 1 Year Product Warranty

We make every effort to ensure that our products are made from the highest quality materials and workmanship. Should you not be completely satisfied with one of our products, we encourage you to contact us so that we can promptly resolve any problem you may be experiencing. Our company representatives will deal with your issue quickly and decisively.

As many AquaTech products are often used in extreme and volatile environments, we are unable to cover for loss or damage of equipment, personal injury or financial loss.

To reduce the risk of these losses occurring, we strongly recommend you read the relevant product instructions carefully and test the product before use

What does the warranty cover?

This warranty covers any defects in materials or workmanship, with exceptions stated below

What is not covered?

The warranty does not cover damage as the result of normal wear and tear. Determination of what constitutes normal wear and tear will be at the discretion of AquaTech service centers. The warranty guarantee only applies to the original purchaser of the product when purchased from AquaTech direct or through one of our authorized dealers. Therefore, we may ask for proof of purchase. This warranty does not cover for any loss of associated equipment such as cameras, lenses or other associated equipment not sold by AquaTech.

Loss of income, reputation or other financial expenses, such as personal injury are also not covered by this warranty. Shipping costs for returned products are the responsibility of the customer.

How long does the coverage last?

This warranty runs for 1 year from the date your product is received.

What will AquaTech do?

AquaTech will repair any defect that proves defective in materials and workmanship. If repairing is not possible, AquaTech will replace the product, or, offer a store credit for the original purchase price, whichever is agreed to by the customer and AquaTech / Retailer store.

How to get service?

Email [contact@aquatech.net](mailto:contact@aquatech.net) and we will advise where to send your product. Alternatively, you may call:

USA: + 1 714 968 6946 Australia: + 61 2 4268 3550

Returns Policy - Aquatech Online Customers only:

AquaTech offers a 14 day return policy for new items purchased directly through our online store or at our physical store. AquaTech will only provide exchanges or store credit for change of mind or incorrectly ordered products. AquaTech will not refund any shipping and credit card costs. Please see our full return at <https://aquatech.net/pages/return-policy>. The customer is responsible for shipping cost of the returned items. A restocking charge may be applied in some countries

How State Law Applies:

This warranty gives you specific legal rights, and you may have other rights which vary according to the state or country in which you are located.

Legals

Please practice extreme caution when diving into deep water. Only use this product in settings that are within yours or other's capabilities. Serious injuries or drowning could occur if you or others are not competent for the prevailing conditions.

AquaTech (NSW) Pty. Ltd., incorporated in Australia. Australian Business Number: 84 062 580 796